

## ThinkPad Configuration Program

You can manipulate your hardware system settings with the ThinkPad Configuration program. To start the ThinkPad Configuration program, click on **Start**, move the cursor to **Programs, ThinkPad**, then **ThinkPad Configuration**.



For more information, click on the **Help** button (



## TrackPoint Setting

You can customize such TrackPoint function as **Press-to Select**, **Sensitivity**, and **Scrolling**. Click on **Start**, move the cursor to **Settings, Control Panel**, then double-click on the **TrackPoint** icon.

## Battery Status

You can see the battery status by using the Fuel Gauge program. To start the Fuel Gauge program, click on **Start, Programs, ThinkPad**, then **Fuel-Gauge**.

## For Further Information

You can find the following information in your ThinkPad user's manuals:

User's Reference	Online User's Guide
<ul style="list-style-type: none"> <li>Getting familiar with your computer</li> <li>Extending the features of your computer</li> <li>Protecting your computer</li> <li>Troubleshooting</li> <li>Getting service</li> <li>Features and specifications</li> <li>Product warranties and notices</li> <li>Glossary and index</li> </ul>	<ul style="list-style-type: none"> <li>Using your computer outside your country</li> <li>Using audio and modem features</li> <li>Protecting your computer</li> <li>Operating with a battery pack</li> <li>Using a PC Card</li> <li>Resolving system resource conflicts</li> <li>Troubleshooting</li> <li>Installing software</li> <li>Managing your system</li> <li>Using PS2 commands</li> </ul>
<p><b>Note:</b> To see the Online User's Guide, click on <b>Start</b>, move the cursor to <b>Programs, ThinkPad</b>, then <b>ThinkPad Online User's Guide</b>.</p>	

## ThinkPad 390 Quick Reference and Service Information

Your Name:

\_\_\_\_\_

Company Name:

\_\_\_\_\_

Model Number:

\_\_\_\_\_

Serial Number:

\_\_\_\_\_

Company or Reseller Service:


\_\_\_\_\_

IBM Service Website:

\_\_\_\_\_


IBM Service Number:

## Location

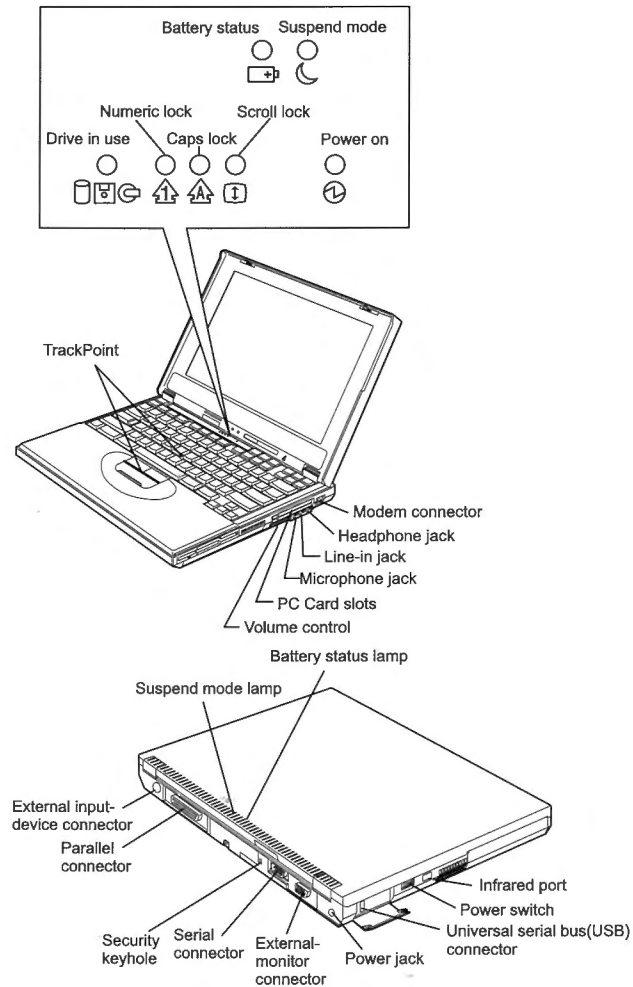

## Function Keys

You can change operational features instantly using the following Fn key and function keys combinations:

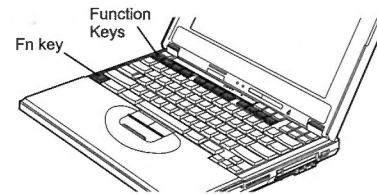

Fn +	Result
F2	The window for the battery power status appears or disappears. (The Fuel-Gauge program must first be activated.)
F3	The computer enters standby mode.
F4	The computer enters suspend mode.
F7	The display output location changes.
F11	During battery-power operation, the power mode changes.
F12	The computer enters hibernation mode.

## Getting Service

**Always read the Solving Computer Problems chapter of your User's Reference before calling IBM.**

During the warranty period, you can get help and information from the International Warranty Service (IWS) in your country. Before you call, fill out the front of this card. Also have:

- Exact wording of any error messages
- Hardware and software configuration information
- Description of the problem
- Information and serial numbers of any options installed on your system

## International Warranty Service

This IBM product is eligible for IWS wherever your machine type is sold by IBM. Your computer must be registered to receive international service. To register, call one of the following IWS offices:

Southeast Asia, Australia, New Zealand, and Hong Kong:	61-2-9354-4171
Canada, Latin America, and the U.S.:	1-800-497-7426
Europe, Middle East, and Africa:	44-1475-893638
Japan, Korea, China (except Hong Kong), and Taiwan:	81-462-73-7598

## Help through a ThinkPad Web Site

- The latest information about ThinkPad computers:

➡ <http://www.ibm.com/thinkpad>

- Technical support information:

➡ <http://www.ibm.com/support>